

**BJE**

Recommended Installation, Maintenance and Inspection Instructions

**JARHEAD
TANK
GAUGES****Jarhead Tank Gauges**

| | | | | | |
|--------|--------|--------|--------|--------|--------|
| 007620 | 007622 | 007625 | 008558 | 008671 | 010594 |
| 007621 | 007623 | 007626 | 008665 | 010591 | 015743 |

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.

WARNING: CANCER AND REPRODUCTIVE HARM - WWW.P65WARNINGS.CA.GOV

WARNING Never use with gasoline or highly flammable liquids.

INSTALLATION INSTRUCTIONS

NOTE: Always adhere to installation / usage instructions and warnings. Improper use may result in injury, damage or hazardous spill.

1. Confirm tank depth corresponds with the tank depth shown on the Jarhead packaging.
2. Remove sight glass.
3. Remove linkage assembly from threaded adaptor.
4. Apply appropriate sealer to male threads of adaptor.
5. Attach adaptor to tank bung.
6. Reinstall linkage assembly using slot in top of disk as guide to assure float arm will clear the side of the tank and/or baffles.
7. Confirm float arm is not touching any baffles or sides of the tank.
8. Reinstall sight glass to threaded adaptor.

DO NOT OVERTIGHTEN.**FLOAT ARM SHOULD NOT TOUCH BAFFLES OR SIDES OF TANK.****TESTING / MAINTENANCE / INSPECTION**

Daily

- Confirm sight glass is not damaged.



Quarterly

- Remove gauge from tank and confirm float is not touching baffles or sides of tank.

- Apply city, state, or federal testing regulations as appropriate.

**ANY TEST / INSPECTION
FAILURE REQUIRES IMMEDIATE
EQUIPMENT REPLACEMENT OR
REMOVAL FROM SERVICE.**

MADE IN THE USA

**ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.**

Improper use may result in injury, damage, or hazardous spill.

**GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

- Use of equipment is at individuals' own risk.
- Always abide and adhere to city, state, and federal regulations regarding use and installation of monitoring equipment.



- Always follow the product manufacturer's installation and maintenance instructions.
- Always turn off all power to monitor during maintenance activities.



- Always replace or remove from service damaged equipment immediately.
- Always report leaks / spills / accidents to appropriate authorities.



- Always wear appropriate safety equipment during maintenance and inspection activities.



- Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of tanks.
- Always use Teflon® tape or appropriate thread sealant.



- The tank contents are the sole responsibility of the tank owner.



- Never allow waste product to touch eyes or skin.



- Never install monitors outdoors without proper protection from the elements.



- Never use on below ground storage tanks.



- Never exceed the maximum milliamps specified in manufacturer's installation and maintenance instructions.

- Never solely rely on this product; there is no substitute for human supervision.

- Never to be used as a component of any automatically controlled pump transfer system.

WARRANTY

Husky Corporation will, at its option, repair, replace, or credit the purchase price of any BJE® product deemed to be defective in material and/or workmanship for a period of one (1) year.

Buyer must return the products to Husky®, transportation charges prepaid. The warranty excludes damages due to malfunction, failure to follow manufacturer's installation, operation or maintenance instructions and guidelines, unauthorized modifications or alterations, abuse, or misuse.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are no other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky is not responsible for any losses (including loss of profits or revenues) incurred by the purchaser during the time necessary to repair the equipment. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves without assuming any obligations to modify any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves previously manufactured.