



# CHOOSING CORRECT BUNG OPENING

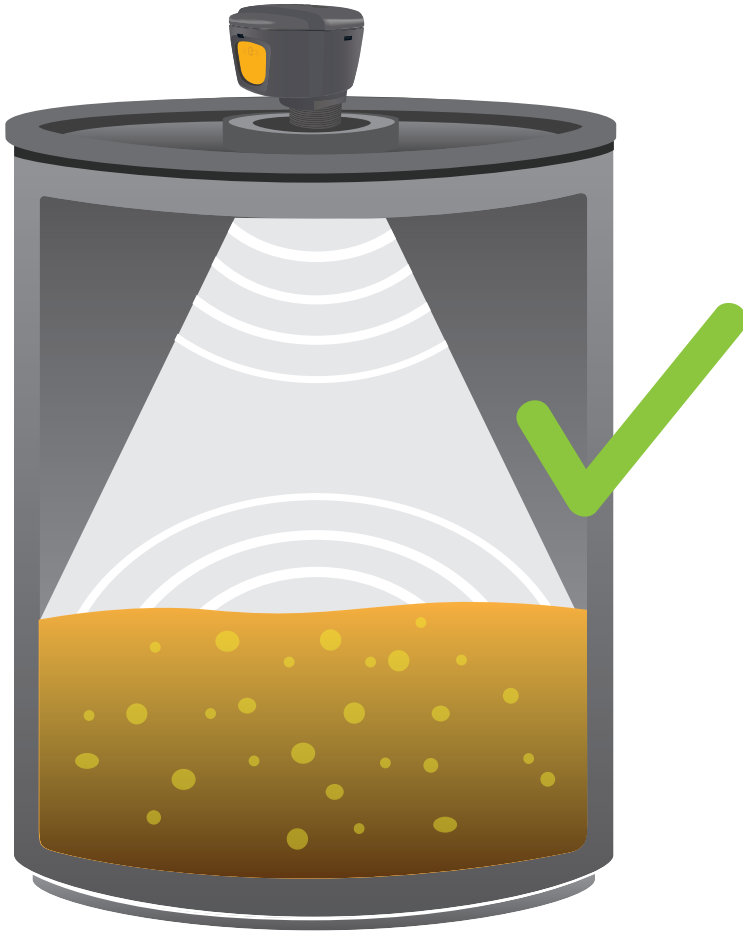

Ultrasonic sensors require an unobstructed column of air for precise measurement.

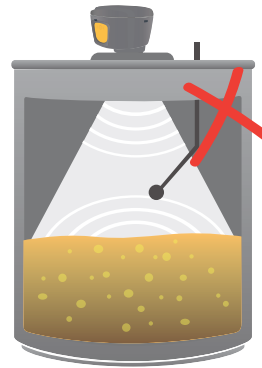

Install clear of manual gauges such as floats



Install clear of stairs and other internal structures



Install facing straight down



Install clear of tank inlets



Install clear of welding seams and corrugated tank walls

**enevo**

[www.enevo.com](http://www.enevo.com)

[support@enevo.com](mailto:support@enevo.com)

USA: +1 844 – ENEVOHELP

UK: +44 (115) 718-0015

EMEA: +358 94 245 1913

## STATUS CHECK



A single red blink indicates the sensor is busy.



A single green blink followed by red blinks indicates the sensor is inactive.



A series of green blinks indicates the sensor is active.

## ACTIVATION

1




HOLD the magnet in a horizontal position and place over icons.

2



You will immediately see a green blink followed by a series of red blinks.

3

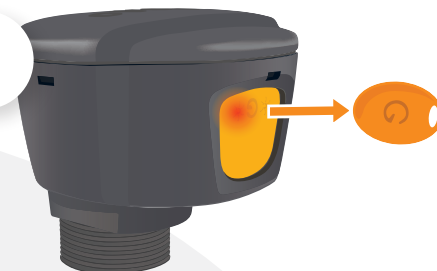

Remove the magnet when red light starts blinking.

4




The blinking red light will be immediately followed by a blinking green light.

5



When the green light starts blinking, HOLD the magnet in a horizontal position and place over icons for 2 seconds, until you get a solid green light.

6

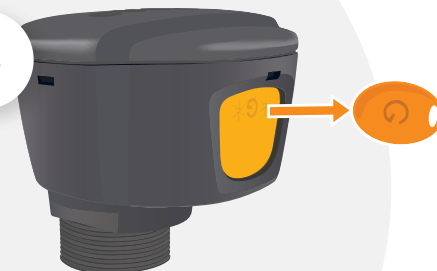

Remove the magnet.

7



Wait 2-10 minutes to allow the sensor to connect to the server. During this time you will not see any lights.

8



You will see a series of green blinks that indicates the sensor has been successfully activated. Blinking will last five minutes.

Optional:  
At this point,  
you can swipe  
the magnet to  
stop the blinking.



**Need help?**  
Scan this QR code for  
an activation video!