



Husky

Recommended Installation, Maintenance
and Inspection Instructions

**X & 1A
WN**

Conventional Whiskey Nozzle

^E840004N & ^E874203N

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



WARNING - FOR FOOD USE ONLY



INSTALLATION INSTRUCTIONS

1. Relieve line pressure.
2. Use pipe thread sealant approved for food grade applications on the male threads of hose section.
3. Tighten approximately 1 or 2 turns past hand tight - do not overtighten.
4. Pressurize system and visually check for leaks.
5. Test nozzle for proper automatic shut off between 5 - 10 gpm / 18.9 - 37.9 Lpm.

DO NOT OVERTIGHTEN. USE WRENCH ON HOSE NUT ONLY.

TESTING / MAINTENANCE / INSPECTION



Daily

- Check for leaks / stains.
- Check for loose spouts.
- Check for damage.
- Check for bent lever.
- Check for broken clip / trigger spring.



Annually

- Lubricate main valve stem.



Monthly

- Check nozzle automatic shut off between 5 - 10 gpm / 18.9 - 37.9 Lpm.
- Check "remove after" date.

MADE IN THE USA

WARRANTY

CONVENTIONAL PRODUCTS – Husky Corporation will, at its option, repair, replace, or credit the purchase price of any Husky® manufactured product which proves upon examination by Husky, to be defective in material and/or workmanship for a period of one (1) year from the manufacture date of shipment by Husky.

Buyer must return the products to Husky, transportation charges prepaid. This warranty does not apply to equipment or parts which have been installed improperly, damaged by misuse, improper operation or maintenance, or which are altered or repaired in any way.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are no other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky dispensing equipment without assuming any obligations to modify any dispensing equipment previously manufactured.

OPERATION INSTRUCTIONS

1. Insert spout into container.
2. Raise the lever and begin fueling.
3. Nozzle will shut off automatically when the container is full.

4. Wait 15 seconds to allow any fluid remaining in the spout to drain.

NOTE: Nozzle is equipped with a unique Flo-Stop® device that shuts off the nozzle if it falls from container or raises above horizontal.

TROUBLESHOOTING GUIDE

Nozzle keeps shutting off or won't dispense...

1. Slow down flow rate - use lower notch on clip.
2. Clean spout tip end.
3. Replace spout assembly.
4. Check dispenser pressure - 19 psi / 1.3 bar to activate nozzle.

Nozzle won't shut off...

1. Check flow rate - minimum of 3 gpm / 11.4 Lpm required.
2. Remove nozzle and drain hose.

Nozzle leaks...

1. Check for loose spout.
2. Check hose connection.
3. Check for cracks in nozzle and hose threads.

Low flow rate...

1. Check for system leak.

GENERAL TECHNICAL DATA

Fluid Type	Test and warranty for whiskey	
Flow Rate	X WN	W/o Flo-Equalizer® = 14 gpm / 52.9 Lpm
	1A WN	W/o Flo-Equalizer® = 25 gpm / 94.6 Lpm
Body	Die cast aluminum	
Disc	Fluorocarbon	
Packing	Double O-ring seal protected by fiber reinforced Teflon®	
Lever	X WN	One piece contoured steel
	1A WN	One piece contoured steel
Shipping Weight	X WN	= 3 lbs / 1.3 kg
	1A WN	= 3.3 lbs / 1.4 kg
Threads	X WN	¾" / 19.1 mm NPT
	1A WN	1" / 25.4 mm NPT
Spout	X WN	= 13/16 in / 20.6 mm O.D.
	1A WN	= 15/16 in / 23.8 mm O.D.
Case Quantity	15	

ACCESSORIES

Model 000385 Reducer Bushing (1" / 25.4 mm to ¾" / 19.1 mm)