



Husky

Recommended Installation, Maintenance
and Inspection Instructions

1690 WN

High Volume Whisky Nozzle

^875010N

IMPORTANTSAFETYINSTRUCTIONS-SAVETHESEINSTRUCTIONSINAREADILYACCESSIBLELOCATION.



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov



WARNING - FOR FOOD USE ONLY



INSTALLATION INSTRUCTIONS

1. Relieve line pressure.
2. Use pipe thread sealant approved for food grade applications on the male threads of hose section.
3. Tighten approximately 1 or 2 turns past hand tight - do not overtighten.
4. Pressurize system and visually check for leaks.
5. Test nozzle for proper automatic shut off minimum 5 gpm / 18.9 Lpm.

DO NOT OVERTIGHTEN. USE WRENCH ON HOSE NUT ONLY.

TESTING / MAINTENANCE / INSPECTION



Daily

- Check for leaks / stains.
- Check for loose spouts.
- Check for damage.
- Check for bent lever.



Annually

- Lubricate main valve stem.



Monthly

- Check nozzle automatic shut off - minimum of 5 gpm/18.9 Lpm
- Check "remove after" date.

MADE IN THE USA

IMPORTANTSAFETYINSTRUCTIONS-SAVETHESEINSTRUCTIONSINAREADILYACCESSIBLELOCATION.

WARRANTY

CONVENTIONAL PRODUCTS – Husky Corporation will, at its option, repair, replace, or credit the purchase price of any Husky® manufactured product which proves upon examination by Husky, to be defective in material and/or workmanship for a period of one (1) year from the manufacture date of shipment by Husky.

Buyer must return the products to Husky, transportation charges prepaid. This warranty does not apply to equipment or parts which have been installed improperly, damaged by misuse, improper operation or maintenance, or which are altered or repaired in any way.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are no other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky dispensing equipment without assuming any obligations to modify any dispensing equipment previously manufactured.

OPERATION INSTRUCTIONS

1. Insert spout into container.
2. Raise the lever and begin fueling.
3. Nozzle will shut off automatically when the container is full.
4. Wait 15 seconds to allow any fluid remaining in the spout to drain.

TROUBLESHOOTING GUIDE

Nozzle keeps shutting off or won't dispense...	<ol style="list-style-type: none">1. Slow down flow rate - use lower lever setting.2. Clean spout tip end.3. Replace spout assembly.
Nozzle won't shut off...	<ol style="list-style-type: none">1. Check flow rate - minimum of 10 gpm / 37.9 Lpm required.2. Remove nozzle and drain hose.
Nozzle leaks...	<ol style="list-style-type: none">1. Check for loose spout.2. Check hose connection.3. Check for cracks in nozzle and hose threads.
Low flow rate...	<ol style="list-style-type: none">1. Check for system leak.

GENERAL TECHNICAL DATA

Fluid Type	Test and warranty for whiskey
Flow Rate	1690 WN = 100 gpm / 378.5 Lpm
Body	Sand cast aluminum
Disc	Fluorocarbon
Packing	Double O-ring seal protected by fiber reinforced Teflon®
Lever	One piece contoured steel
Shipping Weight	1690 WN = 3.9 lbs / 1.8 kg
Threads	1690 WN 1-1/2" / 38.1 mm NPT
Spout	= 1-3/8 in / 34.9 mm O.D.
Case Quantity	15