



MODEL 007605 & 008203  
Recommended Installation, Maintenance  
and Inspection Instructions

007605  
008203

## C4 Oil Filter Crusher

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.

**WARNING: CANCER AND REPRODUCTIVE HARM - [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV)**

**WARNING For use with oil filters only.**

## INSTALLATION INSTRUCTIONS

### Wall Mount Instructions

1. Drill through wall 46" (1,168.4 mm) from floor.
2. Secure first wall bracket to backside of wall using 1/2" (12.7 mm) threaded rod, fender washers and lock washers (not provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
3. Hang crusher on wall bracket just installed.
4. Place back rods through bracket holes and secure with two (2) 1/2" (12.7 mm) and 1/2" (12.7 mm) locking washers (provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
5. Secure second wall bracket to bottom of crusher with two (2) 1/2" x 1 1/2" (12.7 mm x 38.1 mm) bolts, 1/2" (12.7 mm) nuts, and 1/2" (12.7 mm) locking washers (provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
6. Mark and drill through wall to secure second bracket.
7. Secure second wall bracket to backside of wall using 1/2" (12.7 mm) threaded rod, fender washers and lock washers (not provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
8. Connect drain hose and adaptor to the bottom of the crusher - tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
9. Place waste oil recovery drum underneath crusher.
10. Connect air hose to shop air using a quick coupler or union.

**TOP OF CRUSHER SHOULD NOT BE MORE THAN 65" (1,651 mm) FROM FLOOR.  
DO NOT USE LAGS TO INSTALL CRUSHER TO THE WALL.**

### Crusher Stand Instructions

1. Bolt crusher stand with vibration pads to the floor (bolts not provided). Tighten bolts firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
2. Place crusher on stand.
3. Bolt crusher to stand using four (4) 1/2" x 1 1/2" (12.7 mm x 38.1 mm) bolts, 1/2" (12.7 mm) nuts, and 1/2" (12.7 mm) locking washers (provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
4. Connect drain hose and adaptor to the bottom of the crusher - tighten firmly, approximately 1 to 2 turns past hand tight.
5. Place waste oil recovery drum underneath crusher stand.
6. Connect air hose to shop air using a quick coupler or union.

## OPERATION INSTRUCTIONS

NOTE: *Recommended air pressure = 125-175 PSI (8.6-12 bar.)*

1. Open crusher door.
2. Place filter (open end face down) in the center of the crushing chamber.
3. Close crusher door.
4. Pull handle down on ball valve.
5. Wait for crusher to complete the crushing cycle.
6. Push handle up on ball valve.
7. Open crusher door.
8. Confirm crusher ram has fully retracted.
9. Remove crushed filter.

**NEVER ATTEMPT TO OPERATE CRUSHER WITH DOOR OPEN.**

## TESTING / MAINTENANCE / INSPECTION



Daily

- Confirm air hose is properly connected.
- Confirm waste oil recovery drum is correctly positioned under crusher / crusher stand.

- Apply city, state, or federal testing regulations as appropriate.

**ANY TEST / INSPECTION FAILURE  
REQUIRES IMMEDIATE EQUIPMENT  
REPLACEMENT OR REMOVAL FROM  
SERVICE.**

**MADE IN THE USA**

**ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.**  
 Improper use may result in injury, damage, or hazardous spill.

**GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSON:**



- Use of equipment is at individuals' own risk.
- Always abide and adhere to city, state, and federal regulations regarding use and installation of monitoring equipment.



- Always follow the product manufacturer's installation and maintenance instructions.
- Always disconnect air supply during maintenance activities.



- Always replace or remove from service damaged equipment immediately.



- Always report leaks / spills / accidents to appropriate authorities.
- Always wear appropriate safety equipment during maintenance and inspection activities.



- Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of tanks.
- Always use Teflon® tape or appropriate thread sealant.



- The tank contents are the sole responsibility of the tank owner.



- Never allow waste product to touch eyes or skin.

- Never solely rely on this product; there is no substitute for human supervision.
- Never to be used as a component of any automatically controlled pump transfer system.
- Never use crusher with door open.



- Never place hands inside crushing chamber until ram has fully retracted.



- Never crush anything other than used oil filters.

- Never crush more than one filter at a time.

- Never alter crusher or any of its parts.

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.**

**CAUTION: Never use crusher if not securely bolted to the crusher stand or wall mount. Bolt the crusher stand securely to the floor.**

**WARRANTY**

Husky Corporation will, at its option, repair, replace, or credit the purchase price of BJE® products, evaluated to be defective resulting from material and/or workmanship issues for a period of one (1) year. BJE Crusher housings will be covered for a lifetime from material and/or workmanship issues.

Buyer must return the products to Husky®, transportation charges prepaid. The warranty excludes damages due to malfunction, failure to follow manufacturer's installation, operation or maintenance instructions and guidelines, unauthorized modifications or alterations, abuse, or misuse.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are not other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky provides a Lifetime Warranty on crusher housings to be free of material and workmanship defects for as long as the customer owns the product. The Lifetime Warranty applies to housing part numbers 007703, 007704, and 007706. Husky's Lifetime Warranty does not cover normal wear and tear. Husky's Lifetime Warranty does not extend to damage through neglect, accident, misuse or disassembly.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky is not responsible for any losses (including loss of profits or revenues) incurred by the purchaser during the time necessary to repair the equipment. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves without assuming any obligations to modify any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves previously manufactured.