



MODEL 007550 & 007590
Recommended Installation, Maintenance
and Inspection Instructions

Oil Filter Crusher Stand

007550
007590

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.

- WARNING: CANCER AND REPRODUCTIVE HARM - [WWW.P65WARNINGS.CA.GOV](http://www.p65warnings.ca.gov)**
- WARNING For use with oil filter crushers only.**

INSTALLATION INSTRUCTIONS

NOTE: Always adhere to installation / usage instructions and warning. Improper use may result in injury, damage or hazardous spill.

1. Bolt crusher stand with vibration pads to the floor (bolts not provided). Tighten bolts firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
2. Place crusher on stand.
3. Bolt crusher to stand using four(4) ½" x 2" (12.7 mm x 50.8 mm) bolts, ½" (12.7 mm) nuts, and ½" (12.7 mm) locking washers (provided). Tighten firmly, approximately 1 to 2 turns past hand tight - do not overtighten.
4. Place waste oil recovery drum underneath crusher stand.

DO NOT INSTALL STAND WITHOUT VIBRATION PADS.

TESTING / MAINTENANCE / INSPECTION



Daily

- Confirm waste oil recovery drum is correctly positioned under crusher / crusher stand.

- Apply city, state, or federal testing regulations as appropriate.

**ANY TEST / INSPECTION
FAILURE REQUIRES IMMEDIATE
EQUIPMENT REPLACEMENT OR
REMOVAL FROM SERVICE.**

MADE IN THE USA

**ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.**

Improper use may result in injury, damage, or hazardous spill.

**GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSON:**

- Use of equipment is at individuals' own risk.
- Always abide and adhere to city, state, and federal regulations regarding use and installation of monitoring equipment.



- Always follow the product manufacturer's installation and maintenance instructions.



- Always disconnect air supply during maintenance activities.



- Always replace or remove from service damaged equipment immediately.



- Always report leaks / spills / accidents to appropriate authorities.
- Always wear appropriate safety equipment during maintenance and inspection activities.
- Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of tanks.
- Always use Teflon® tape or appropriate thread sealant.



- The tank contents are the sole responsibility of the tank owner.



- Never allow waste product to touch eyes or skin.



- Never solely rely on this product; there is no substitute for human supervision.



- Never to be used as a component of any automatically controlled pump transfer system.

- Never use crusher with door open.

- Never place hands inside crushing chamber until ram has fully retracted.

- Never crush anything other than used oil filters.

- Never crush more than one filter at a time.

- Never alter crusher or any of its parts.

CAUTION: Never use crusher if not securely bolted to the crusher stand and the crusher stand is bolted securely to the floor.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION.

WARRANTY

Husky Corporation will, at its option, repair, replace, or credit the purchase price of BJE® products, evaluated to be defective resulting from material and/or workmanship issues for a period of one (1) year. BJE Crusher housings will be covered for a lifetime from material and/or workmanship issues.

Buyer must return the products to Husky®, transportation charges prepaid. The warranty excludes damages due to malfunction, failure to follow manufacturer's installation, operation or maintenance instructions and guidelines, unauthorized modifications or alterations, abuse, or misuse.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are not other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky is not responsible for any losses (including loss of profits or revenues) incurred by the purchaser during the time necessary to repair the equipment. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves without assuming any obligations to modify any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves previously manufactured.