



MODEL #8566
Recommended Installation, Maintenance
and Inspection Instructions

Red Fox™ Tank Gauge

8566

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN A READILY ACCESSIBLE LOCATION.



WARNING Never use with gasoline or highly flammable liquids.

INSTALLATION INSTRUCTIONS

1. Remove cap from gauge nipple.
2. Remove tissue paper allowing chain to free-fall.
3. Confirm chain is knot-free.
4. Attach float eyelet to end of chain.
5. Remove shipping foam insert using plastic loop.
6. Slowly pull float down then retract chain to confirm gauge is functioning properly.
7. Apply Teflon tape or appropriate pipe thread sealant to male threads of gauge. Ensure there is no sealant on the chain or internal mechanism, as this may void the warranty.
8. Using the chain, slowly lower the float assembly to the bottom of the tank (do not drop float in).
9. Install gauge to tank, tighten firmly - approximately 1 to 2 turns past hand tight - but do not overtighten.

***DO NOT OVERTIGHTEN. DO NOT USE HOUSING AS A WRENCH.
ALWAYS USE CHAIN TO LOWER FLOAT TO BOTTOM OF TANK.***

TESTING / MAINTENANCE / INSPECTION



Quarterly
• Remove gauge from tank and confirm smooth movement of chain.

- Apply city, state, or federal testing regulations as appropriate.

***ANY TEST / INSPECTION
FAILURE REQUIRES IMMEDIATE
EQUIPMENT REPLACEMENT OR
REMOVAL FROM SERVICE.***

MADE IN THE USA

**ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.**

Improper use may result in injury, damage, or hazardous spill.

**GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

- Always abide and adhere to city, state, and federal regulations regarding use and installation of monitoring equipment.
 - Always follow the product manufacturer's installation and maintenance instructions.
 - Always turn off all power to monitor during maintenance activities.
 - Always replace or remove from service damaged equipment immediately.
 - Always report leaks / spills / accidents to appropriate authorities.
 - Always wear appropriate safety equipment during maintenance and inspection activities.
 - Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of tanks.
 - Always use Teflon tape or appropriate thread sealant.
- The tank contents are the sole responsibility of the tank owner.
 - Never allow waste product to touch eyes or skin.
 - Never install monitors outdoors without proper protection from the elements.
 - Never use on below ground storage tanks.
 - Never exceed the maximum milliamps specified in manufacturer's installation and maintenance instructions.
 - Never solely rely on this product; there is no substitute for human supervision.
 - Never to be used as a component of any automatically controlled pump transfer system.

CAUTION: NEVER USE HOUSING AS A WRENCH!

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN A READILY ACCESSIBLE LOCATION.

WARRANTY

Husky Corporation will, at its option, repair, replace, or credit the purchase price of any B J Enterprises or B J Enterprises now part of Husky, to be defective in material and/or workmanship for a period of one (1) year.

Buyer must return the products to Husky, transportation charges prepaid. The warranty excludes damages due to malfunction, failure to follow manufacturer's installation, operation or maintenance instructions and guidelines, unauthorized modifications or alterations, abuse, or misuse.

The warranty provisions contained herein apply only to original purchasers who use the equipment for commercial or industrial purposes. There are no other warranties of merchantability, fitness for a particular purpose, or otherwise, and any other such warranties are hereby specifically disclaimed.

Husky assumes no liability for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. Husky is not responsible for any losses (including loss of profits or revenues) incurred by the purchaser during the time necessary to repair the equipment. Husky assumes no liability for any incidental, consequential, or other damages under any warranty, express or implied, and all such liability is hereby expressly excluded.

Husky reserves the right to change or improve the design of any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves without assuming any obligations to modify any Husky Oil Filter Crushers, Tank Monitors, Tank Gauges, Overfill Alarms, Overfill Accessories, Air Shut-off Valves, Solenoid Valves, and Electronic Drain Valves previously manufactured.